



ROLAIR®


SCHEMATIC FOR MODELS


V5160K30 V5360K30

V5180K30 V5380K30

V5112K30 V5312K30

Production starting 10/18

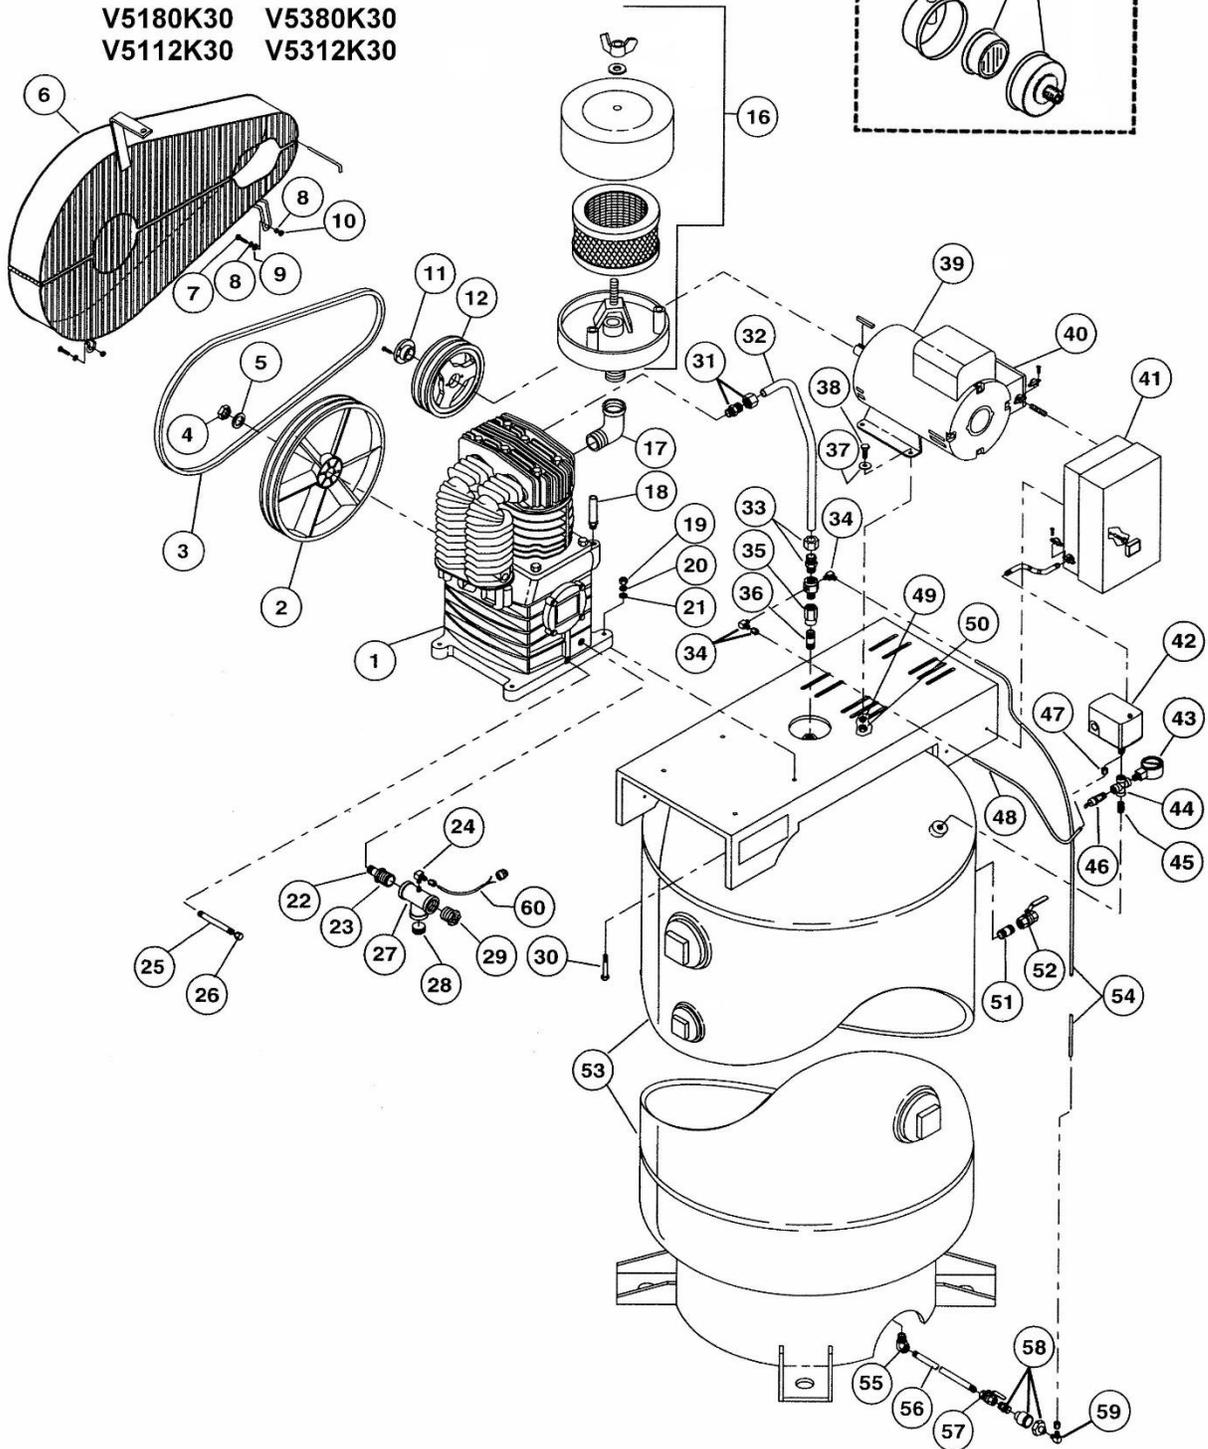

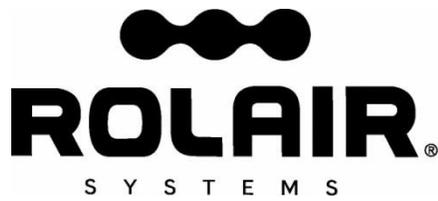

**PARTS LIST FOR MODELS
V5160K30, V5360K30
V5180K30, V5380K30
V5112K30, V5312K30**

| Sch # | Description | Part # | Qty. | Sch # | Description | Part # | Qty. | | |
|-------|--|-----------------|------|-----------------------|---|------------------------|-----------------------------------|------------|------|
| 1 | II Stage Pump with Flywheel | PMP22K30CH | 1 | 33 | Brass Nut and Ring (used with CV6X6T) | BRNT0750 | 1 | | |
| | II Stage Pump Less Flywheel | PMP22K30CHLF | 1 | | | BRRG0750 | 1 | | |
| 2 | Flywheel | 31003040CH | 1 | 34 | Check Valve (Standard Production) | BREL0250X012539 | 1 | | |
| 3 | Belt | BTA66 | 2 | | | CV4X4L1 (before 6/14) | 1 | | |
| 4 | Nut | 37403780CH | 1 | | | CV6X6T (6/14-current) | 1 | | |
| 5 | Washer | 37502450CH | 1 | | | CV4X4L2 (before 6/14) | 1 | | |
| 6 | Belt Guard | BG128 | 1 | 35 | Check Valve (As Shown w/Automatic Tank Drain) | CV6X6T2 (6/14-current) | 1 | | |
| 7 | Bolt | MIS10005 | 2 | | | | | | |
| 8 | Washer | MIS10102 | 2 | 36 | Nipple | BLNP0500X1500 | 1 | | |
| 9 | Washer | MIS10103 | 2 | 37 | Washer | MIS10103 | 4 | | |
| 10 | Nut | MIS10001 | 2 | 38 | Bolt | MIS10022 | 4 | | |
| 11 | Bushing | H1X1.125 | 1 | | | 39 | 5 HP Motor – 1 Phase "V51 Series" | MTRG104 | 1 |
| 12 | Pulley | PU2BK80H | 1 | 39 | 5 HP Motor - 3 Phase "V53 Series" | MTRG303 | 1 | | |
| 16 | Intake Filter Assembly (before 10/18) | FS14075 | 1 | | | 40 | Box Connector | 161 | 2 |
| | Filter Element for FS14075 | 431 | 1 | 41 | Magnetic Starter, 1 Phase | MAG51F230V | 1 | | |
| 16A | Intake Filter Assembly (after 10/18) | FS10072 | 1 | | | 41 | Magnetic Starter, 3 Phase | MAG53F230V | 1 |
| | Filter Element for FS10072 | 433 | 1 | 42 | Pressure Switch | | | PS2020M | 1 |
| 17 | Elbow | BLEL0750X90S | 1 | 43 | Gauge | GA0250300 | 1 | | |
| 18 | 3/8" Breathe/Oil Fill Plug | 36507050CH | 1 | 44 | Cross | BLCR0250 | 1 | | |
| | | | | 45 | Nipple | BLNP0250X1500 | 1 | | |
| 19 | Nut | MIS10040 | 4 | 46 | Safety Relief Valve | SRV0250A200 | 1 | | |
| 20 | Lock Washer | MIS10100 | 4 | 47 | Pressure Switch Relief Valve | PS2020RV | 1 | | |
| 21 | Washer | MIS10103 | 4 | | | 48 | 1/4" Nylon Tubing – 18" | 178D | 1.5' |
| 22 | Nipple | BLNP0500X2500 | 1 | 48 | Brass Nut | BRNT0250 | 2 | | |
| 23 | Bushing | BLBS1000X0500 | 1 | | Brass Ring | BRRG0250 | 2 | | |
| 24 | Brass Elbow | BREL0250X025039 | 1 | | Brass Sleeve | BRSL0250 | 2 | | |
| 25 | Nipple | BLNP0250X4000 | 1 | | 49 | Lock Washer | MIS10099 | 4 | |
| 26 | Cap | BLCA0250 | 1 | 50 | Nut | MIS10020 | 4 | | |
| 27 | Tee | BLTE1000 | 1 | 51 | Nipple | BLNP0500X2500 | 1 | | |
| 28 | Plug | BLC SPL1000 | 1 | 52 | Shut-Off Valve | SOV0500B | 1 | | |
| 29 | Sight Gauge (Standard Prod.) | 36500140CH | 1 | | | 53 | Tank Assy. (60 Gallon) | TNK060AV | 1 |
| | | | | | | | Tank Assy. (80 Gallon) | TNK080AV | 1 |
| | Gasket (Standard Prod.) | 30500130CH | 1 | Tank Assy. (120 Gal.) | TNK120AV | | 1 | | |
| | Sight Gauge (As shown on unit w/Low Oil Control) | TF050101AV | 1 | 54 | 1/4" Copper Tubing | CTUBE14 | (Specify Length) | | |
| 30 | Bolt | MIS10043 | 4 | 55 | Elbow | BLEL0250X90S | 1 | | |
| 31 | Brass Straight | BRST0750X075038 | 1 | 56 | Nipple | BLNP0250X4000 | 2 | | |
| 32 | 3/4" Copper Tubing – 18" | CTUBE34 | 1.5' | 57 | Shut-Off Valve | SOV0250B | 1 | | |
| | | | | 58 | Automatic Tank Drain | 3800H | 1 | | |
| 33 | Brass Straight (used with CV6X6L2 and CV4X4L2) | BRST0750X050038 | 1 | 59 | Brass Elbow | BREL0250X012539 | 1 | | |
| | | | | 60 | Low Oil Control | 162745 | 1 | | |

